


# INSTALLATION INSTRUCTIONS

LED Retrofit Kits for CFL Replacement 160923v1

## INSTALLATION – Ballast Removal & Wiring of LED Retrofit Kit


**BEFORE**

CFL Lamp Connected to Ballast

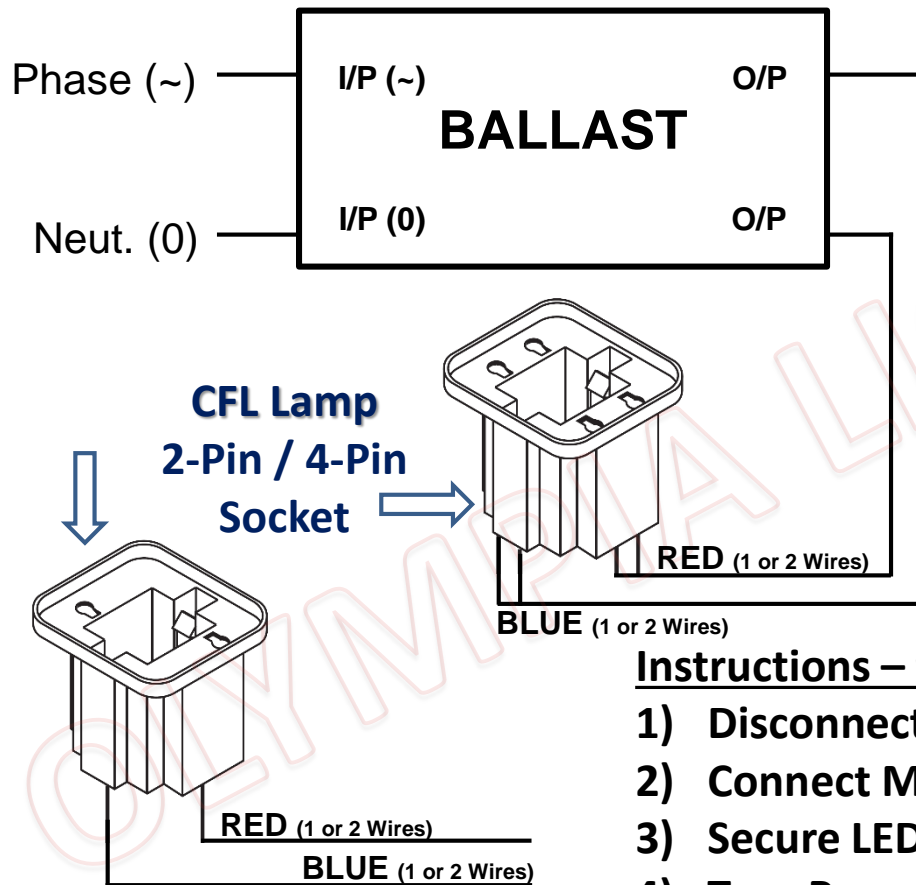

**AFTER**

Self Ballasted LED Lamps Connected to Mains Directly

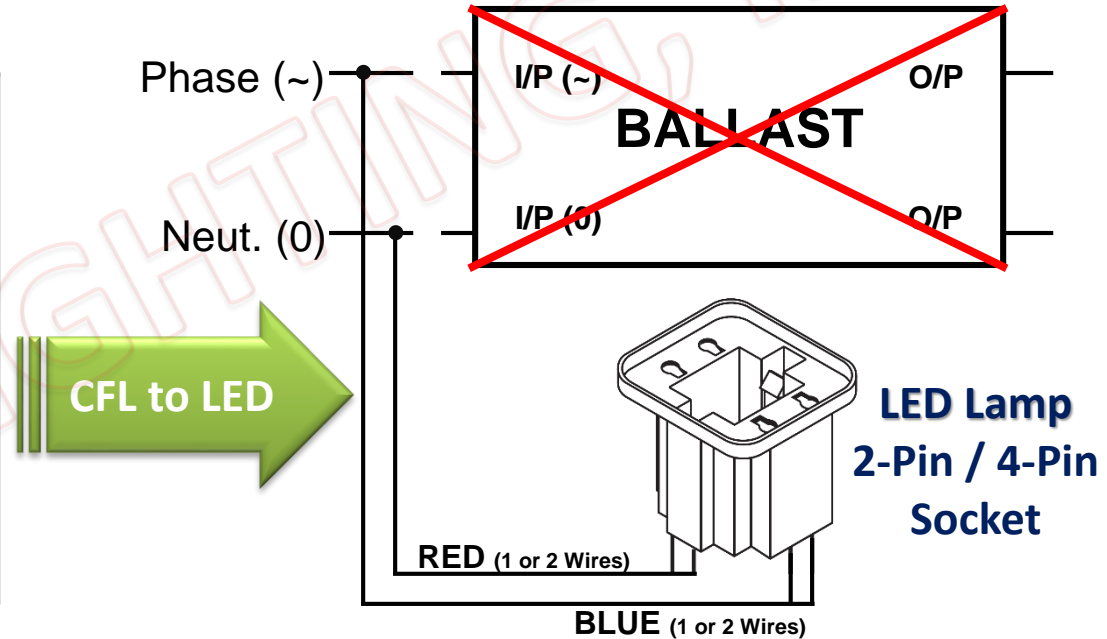

**Instructions – follow the steps below:**

- 1) Disconnect / Remove Existing Ballast
- 2) Connect Mains Wires to Lamp Socket
- 3) Secure LED Lamp to Lamp Socket
- 4) Turn Power On, 277Vac Max. !!!

**277Vac MAX !**

**WARNING – Turn Power Off during Ballast Replacement and Wiring of LED Retrofit Kit !**